

# 1<sup>st</sup> Choice

Tension Adjustment Screw



## Trigger Travel:

There is no longer a trigger travel adjustment as the sear engagement is now controlled by Carter's Controlled Engagement System. There is still the standard tension adjustment that is shown below.

## Trigger Tension Adjustment:

Using .050 hex key, loosen the locking screw on the side of the case. This will allow you to use the 3/32 hex key to adjust the larger tension adjustment screw. In gives you more tension, out gives you less tension. The screw allows you a micro adjust feature to allow you the perfect amount of trigger tension. After adjusting to your preference, snug the locking screw to keep the adjustment screw from moving. Caution, insufficient spring tension can cause a misfire and may cause damage.

## General Directions for Use:

Simply slip your d-loop into the jaw slot and push in on the cocking lever. This will close your jaw on the loop and lock it. Draw and anchor while keeping your thumb away from the trigger. After anchoring and acquiring your target, gently rest your thumb on the trigger. Applying thumb pressure will fire the release.

For more information, contact Carter Enterprises technical support at 1-208-624-3467.