


Chocolate Addiction

by **Carter**
Enterprises

Accuracy Defined Through Design

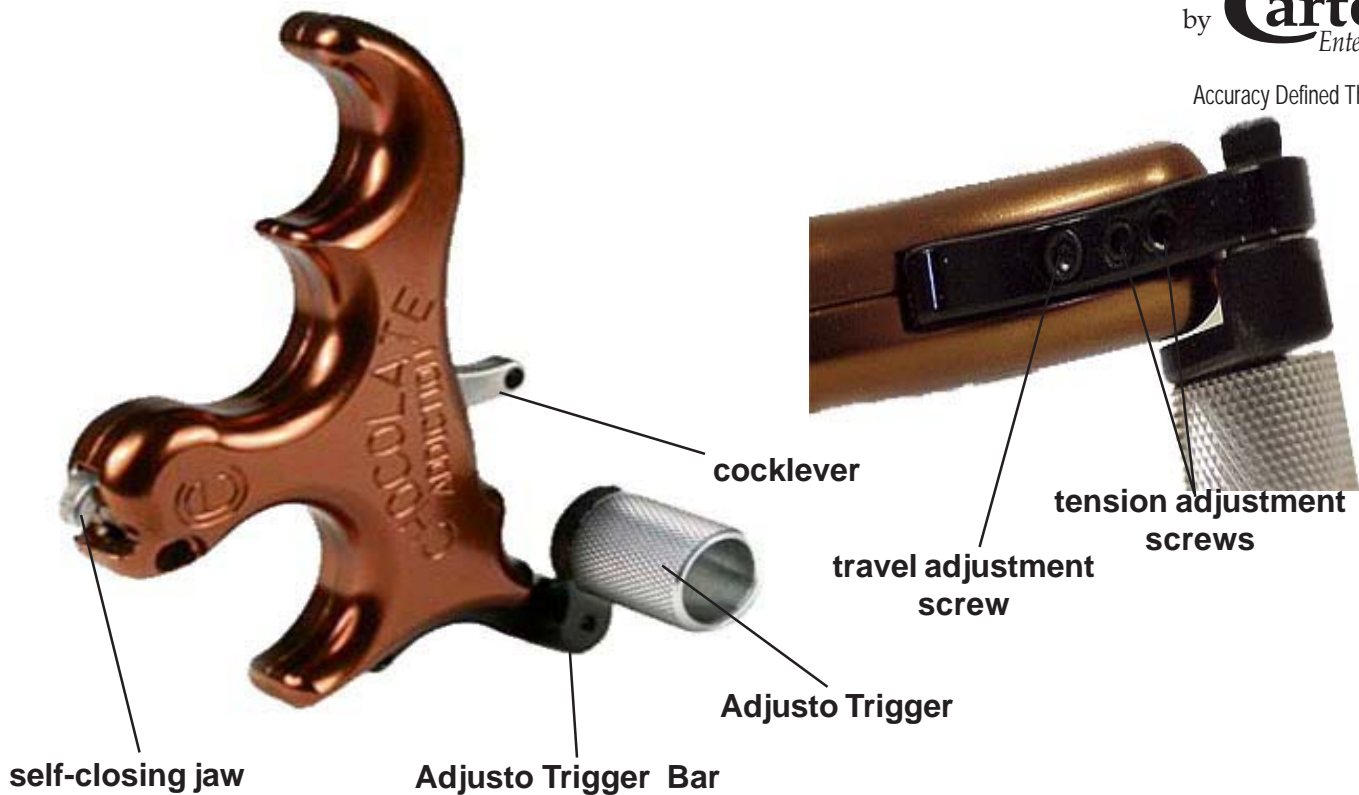

General Directions for Use:

Trigger Travel Adjustment

To adjust the trigger travel*, turn the third, or largest set screw in the trigger clockwise for less travel, and counterclockwise for more travel. After adjusting the set screw, test the release by hooking a string to a stationary object and test-firing the release. Caution: if the set screw is adjusted for insufficient travel, the release may fire prematurely and possibly cause damage. **Travel refers to the degree the trigger will move prior to the release firing.*

Trigger Tension Adjustment

To adjust trigger tension, turn the two smaller set screws in the trigger (closest to the Adjusto Trigger Plus) clockwise for heavier tension and counterclockwise for lighter tension. If heavier/lighter springs are preferred, simply removed the two set screws, empty out the two springs already in the release, and replace with two of the other springs provided with this release. *Note: Use small, gentle adjustments to achieve the desired result.*

Adjusto Trigger and Bar

The Chocolate Addiction release includes an adjustable knurled knob as well as an adjustable bar to help the release fit more comfortably in your hand. To adjust the knurled knob, loosen either bolt, rotate the bar or knob to the desired fit, and retighten the bolt to hold the Adjusto Trigger and bar in position.

Recommended Use

When drawing back, always keep your thumb away from the trigger. Carter Enterprises recommends shooting the Chocolate Addiction using back-tension form off a D-loop or the release rope. Once you are at full draw, push your bow hand toward the target and lightly pull your release hand back while resting your thumb on the trigger, thus firing it in one smooth motion.

For more information, contact Carter Enterprises technical support at 1-208-624-3467.