


N V

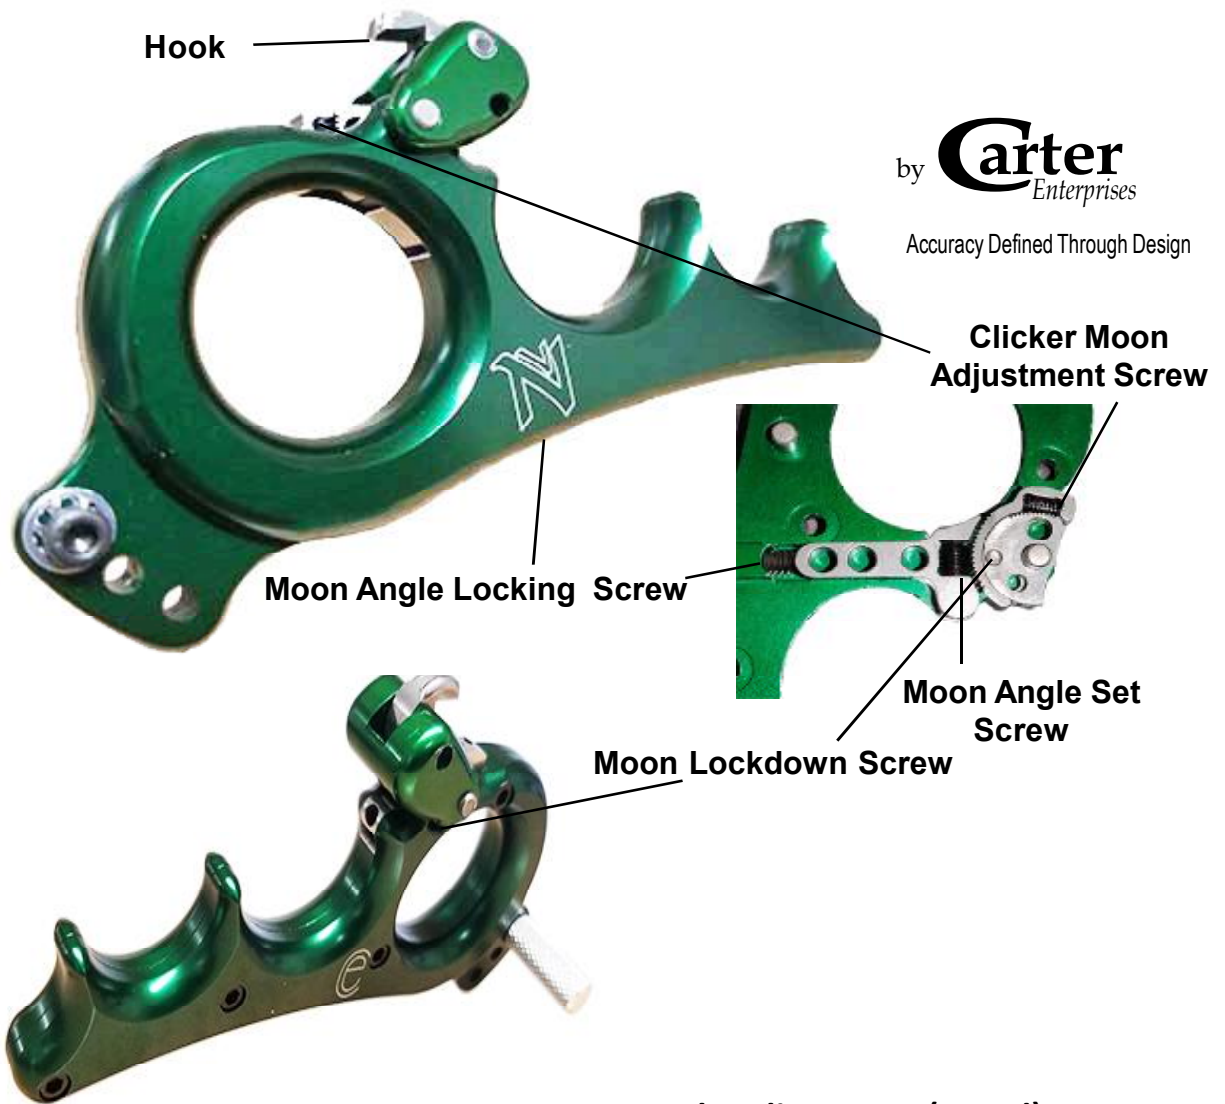

by **Carter**
Enterprises

Accuracy Defined Through Design

General Directions for Use:

Clicker Adjustment

Loosen the clicker lockdown screw using the supplied .050 hex key. Using the same .050 hex key, turn the clicker moon adjustment screw clockwise for less distance from the click to firing, Counterclockwise for more distance. Retighten the clicker lockdown screw.

Moon angle adjustment (speed)

Loosen the moon lockdown screw located in the bottom of the handle using the 1/16 hex key. Use the 5/64 hex key to turn the moon angle set screw. Turning the screw clockwise will increase the moon angle (slower speed to fire) Counterclockwise will give you less moon angle (faster to fire) Retighten the moon lockdown screw and test the speed of release on a simulator for safety before attempting to draw your bow. Insufficient angle can result in a misfire.